



DEEBOT™ N8

Instruction Manual/说明书/說明書

EN	Instruction Manual.....	2
ZH-CN	说明书.....	25
ZH-TW	說明書.....	48

Live Smart. Enjoy Life.

Should you encounter situations that have not been properly addressed in this Instruction Manual, please contact our Customer Service Center where a technician will be able to help you with your specific problem or question.

For more information, please visit the ECOVACS ROBOTICS official website: www.ecovacs.com

The company reserves the right to make technological and/or design changes to this product for continuous improvement.

Thank you for choosing DEEBOT!

Contents

1. Important Safety Instructions	4
2. Package Contents	6
3. Operating and Programming.....	9
4. Maintenance	15
5. Indicator Light.....	20
6. Troubleshooting.....	21
7. Technical Specifications	24

1. Important Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical Appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

SAVE THESE INSTRUCTIONS

1. This Appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the Appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the Appliance.
3. Clear the area to be cleaned. Remove power cords and small objects from the floor that could entangle the Appliance. Tuck rug fringe under the rug base, and lift items such as curtains and tablecloths off the floor.
4. If there is a drop off in the cleaning area due to a step or stairs, you should operate the Appliance to ensure that it can detect the step without falling over the edge. It may become necessary to place a physical barrier at the edge to keep the unit from falling. Make sure the physical barrier is not a trip hazard.
5. Only use as described in this manual. Only use attachments recommended or sold by the manufacturer.
6. Please make sure your power supply source voltage matches the power voltage marked on the Docking Station.
7. For INDOOR household use ONLY. Do not use the Appliance in outdoor, commercial or industrial environments.
8. Use only the original rechargeable battery and Docking

Station provided with the Appliance from the manufacturer. Non-rechargeable batteries are prohibited. For battery information, please refer to Specifications section.

9. Do not use without dust bin and/or filters in place.
10. Do not operate the Appliance in an area where there are lit candles or fragile objects.
11. Do not use in extremely hot or cold environments (below -5°C/23°F or above 40°C/104°F).
12. Keep hair, loose clothing, fingers, and all parts of body away from any openings and moving parts.
13. Do not operate the Appliance in a room where an infant or child is sleeping.
14. Do not use Appliance on wet surfaces or surfaces with standing water.
15. Do not allow the Appliance to pick up large objects like stones, large pieces of paper or any item that may clog the Appliance.
16. Do not use Appliance to pick up flammable or combustible materials such as gasoline, printer or copier toner, or use in areas where they may be present.
17. Do not use Appliance to pick up anything that is burning or smoking, such as cigarettes, matches, hot ashes, or anything that could cause a fire.
18. Do not put objects into the suction intake. Do not use if the suction intake is blocked. Keep the intake clear of dust, lint, hair, or anything that may reduce air flow.
19. Take care not to damage the power cord. Do not pull on or carry the Appliance or Docking Station by the power cord, use the power cord as a handle, close a door on the power cord, or pull power cord around sharp edges or corners. Do not run Appliance over the power cord. Keep power cord away from hot surfaces.

20. If the power cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.
21. Do not use the Docking Station if it is damaged. The power supply is not to be repaired and not to be used any longer if it is damaged or defective.
22. Do not use with a damaged power cord or receptacle. Do not use the Appliance or Docking Station if it is not working properly, has been dropped, damaged, left outdoors, or come in contact with water. It must be repaired by the manufacturer or its service agent in order to avoid a hazard.
23. Turn OFF the power switch before cleaning or maintaining the Appliance.
24. The plug must be removed from the receptacle before cleaning or maintaining the Docking Station.
25. Remove the Appliance from the Docking Station, and turn OFF the power switch to the Appliance before removing the battery for disposal of the Appliance.
26. The battery must be removed and discarded according to local laws and regulations before disposal of the Appliance.
27. Please dispose of used batteries according to local laws and regulations.
28. Do not incinerate the Appliance even if it is severely damaged. The batteries can explode in a fire.
29. When not using the Docking Station for a long period of time, please unplug it.
30. The Appliance must be used in accordance with the directions in this Instruction Manual. ECOVACS ROBOTICS cannot be held liable or responsible for any damages or injuries caused by improper use.
31. The robot contains batteries that are only replaceable by skilled persons. To replace the robot's battery, please contact Customer Service.
32. If the robot will not be used for a long time, power OFF the robot for storage and unplug the Docking Station.


33. WARNING: For the purposes of recharging the battery, only use the detachable supply unit CH1822 provided with the Appliance.

To satisfy RF exposure requirements, a separation distance of 20 cm or more should be maintained between this device and persons during device operation.


To ensure compliance, operations at closer than this distance is not recommended. The antenna used for this transmitter must not be co-located in conjunction with any other antenna or transmitter.

	Class II
	Short-circuit-proof safety isolating transformer
	Switch mode power supply
	For indoor use only
	Direct current
	Alternating current

2. Package Contents/2.1 Package Contents

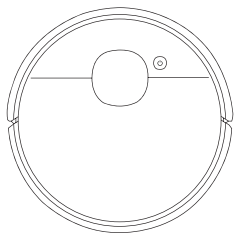


Robot

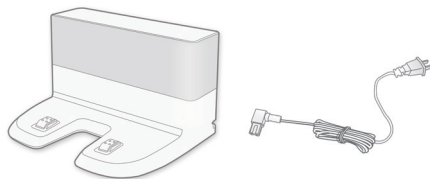


Docking Station




Instruction Manual




Side Brushes



Mopping Pad Plate



Washable Mopping Pad




Wet Mopping Pads



Note: Figures and illustrations are for reference only and may differ from actual product appearance. Product design and specifications are subject to changes without notice.

2. Package Contents/2.2 Product Diagram


Robot

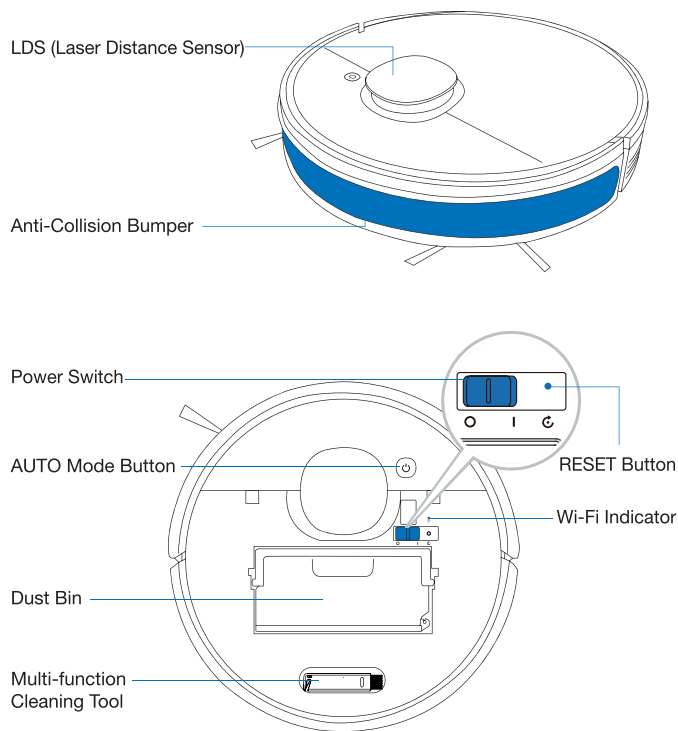


Bottom View

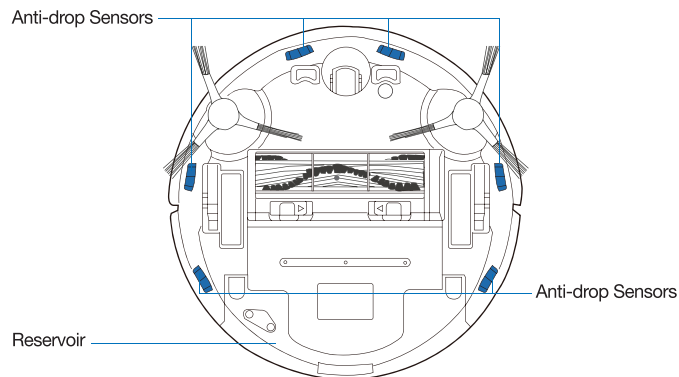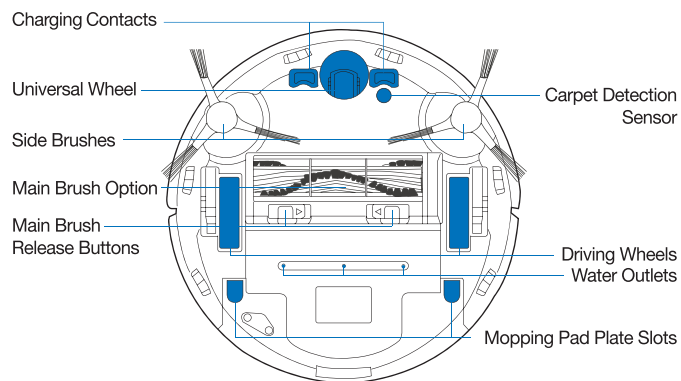


Dust Bin

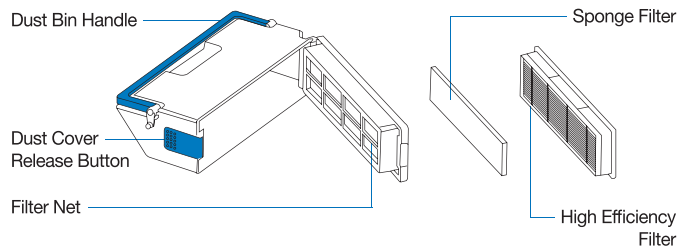

Docking Station

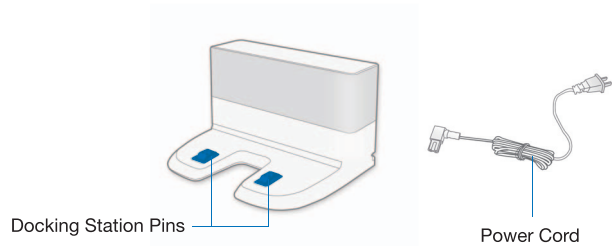


Reservoir

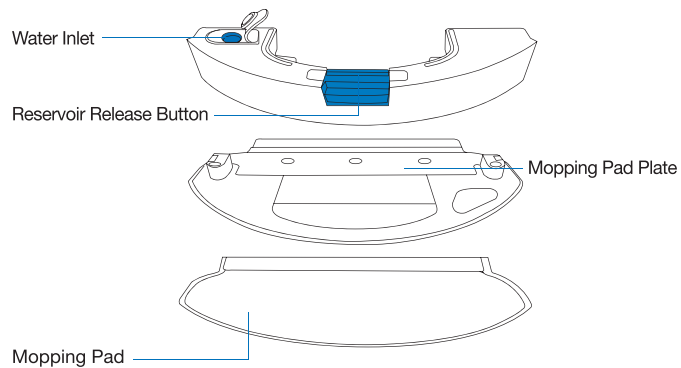


3. Operating and Programming/3.1 Notes Before Cleaning


Tidy up the area to be cleaned by putting furniture, such as chairs, in their proper place.

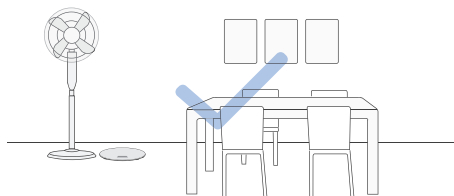

During the first use, make sure each room door is open to help DEEBOT fully explore your house.

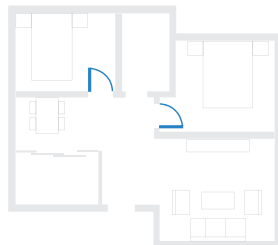

It may be necessary to place a physical barrier at the edge of a drop to stop the unit from falling over the edge.

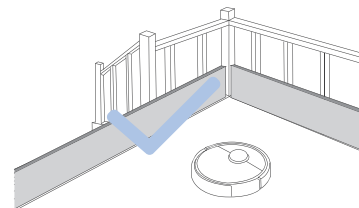

Put away objects including cables, cloths and slippers, etc. on the floor to improve the cleaning efficiency.






Before using the product on a rug with tasseled edges, please fold the rug edges under.




Please do not stand in narrow spaces, such as hallways, and make sure not to block the LDS Laser Distance Sensor.

3. Operating and Programming/3.2 Quick Start


1 Remove Protective Strips and Films

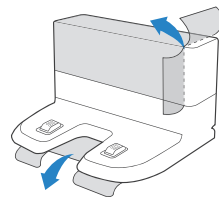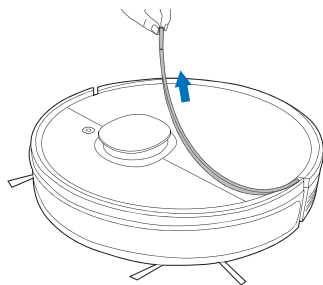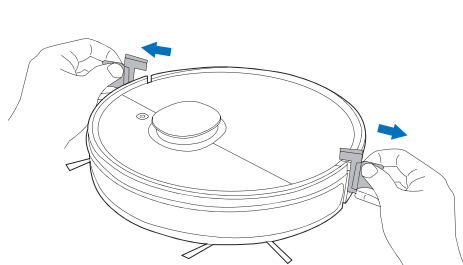

2 Assemble Docking Station

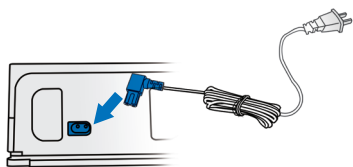


3 Install Side Brushes

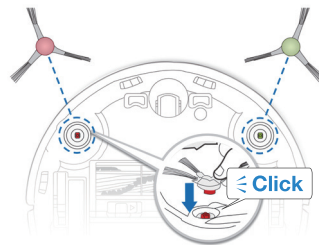


3. Operating and Programming/3.3 Charge DEEBOT

1 Docking Station Placement

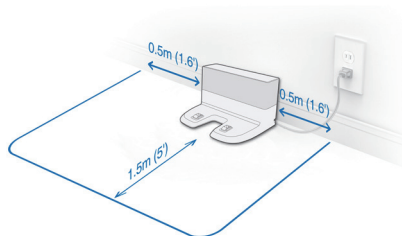


2 Power ON

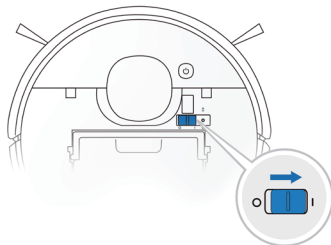

Note: I = ON, O = OFF.

! DEEBOT cannot be charged when being powered OFF.

3 Charge DEEBOT

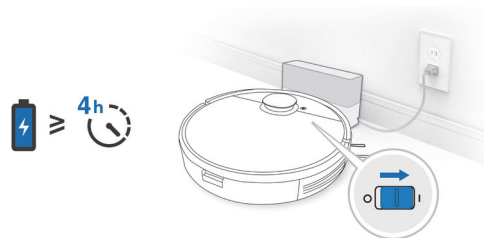

Note: When DEEBOT completes the cleaning cycle or when the battery gets low, DEEBOT automatically returns to the Docking Station to recharge itself. DEEBOT can also be sent back to the Docking Station at any time by using the ECOVACS App or by pressing the AUTO Button on the robot for 3 seconds.

Empty remaining water from the Reservoir and remove the Mopping Pad Plate before charging DEEBOT.

3. Operating and Programming/3.4 ECOVACS HOME App

To enjoy all available features, it is recommended to control your DEEBOT via the ECOVACS HOME app.

Before you start, make sure that:

- Your mobile phone is connected to a Wi-Fi network.
- The 2.4GHz band wireless signal is enabled on your router.
- The Wi-Fi indicator light on DEEBOT is slowly flashing.



Wi-Fi Indicator Light



	Slowly flashing	Disconnected to Wi-Fi or waiting for Wi-Fi connection
	Rapidly flashing	Connecting to Wi-Fi
	Solid	Connected to Wi-Fi

Tips: If you have any problems during the Wi-Fi setup process, refer to the Troubleshooting > Wi-Fi Connection section in this manual.


3. Operating and Programming/3.5 Operating DEEBOT

During the first cleaning, please supervise DEEBOT and assist it should there be a problem.

1 Start

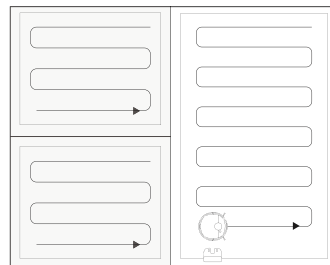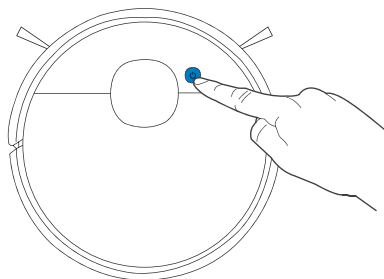


2 Pause

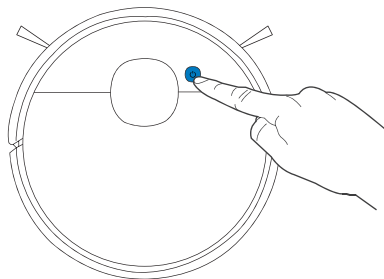

3 Return to Charge


Pressing  for 3 seconds to send DEEBOT back to the Docking Station.

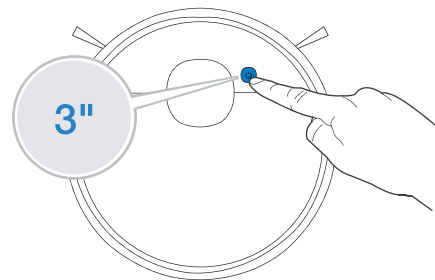


Note: The robot's Control Panel stops glowing after the robot is paused for a few minutes. Press the AUTO Mode Button on DEEBOT to wake up the robot.

3. Operating and Programming/3.6 OZMO Mopping System

- 1 **Note:** To prolong the service life of the reservoir, it is recommended to use purified water or softened water for OZMO mopping system.

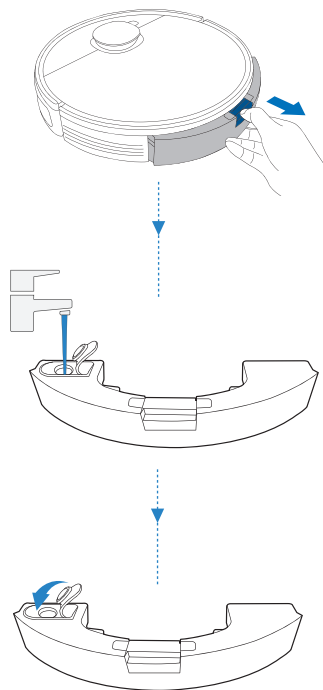

- 2 **Note:** When DEEBOT is mopping, DEEBOT automatically detects the carpet and keeps away from it. If you need to clean the carpet, please uninstall the Mopping Pad Plate first.

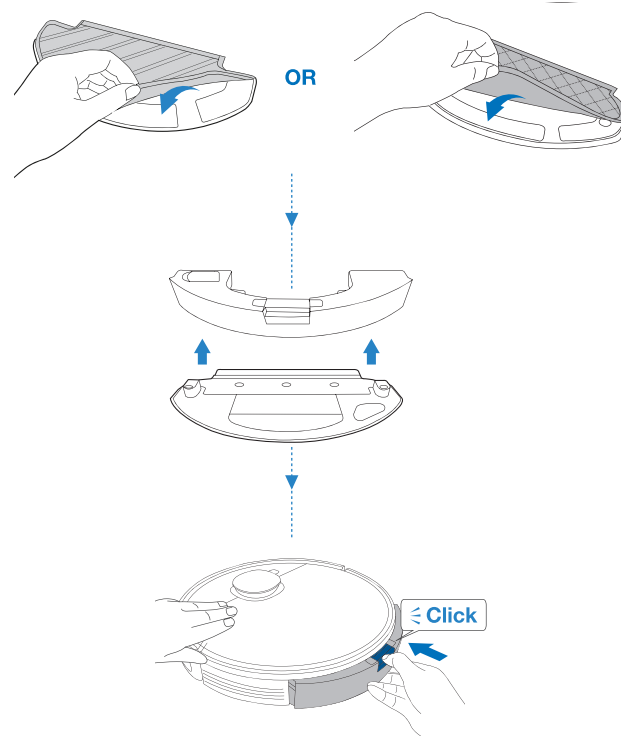

4. Maintenance/4.1 Regular Maintenance

To keep DEEBOT running at peak performance, perform maintenance tasks and replace parts with the following frequencies:

Robot Part	Maintenance Frequency	Replacement Frequency
Wet Mopping Pad	/	After each use
Washable Mopping Pad	After each use	Every 50 washes
Reservoir/Mopping Pad Plate	After each use	/
Side Brush	Once every 2 weeks	Every 3-6 months
Main Brush	Once per week	Every 6-12 months
Sponge Filter/ High Efficiency Filter	Once per week	Every 3-6 months
LDS Laser Distance Sensor Universal Wheel Anti-Drop Sensors Bumper Charging Contacts Docking Station Pins	Once per week	/


A multi-function Cleaning Tool is provided for easy maintenance. Handle with care, this cleaning tool has sharp edges.

Note: ECOVACS manufactures various replacement parts and fittings. Please contact Customer Service for more information on replacement parts.

4. Maintenance/4.2 OZMO Mopping System


Before performing cleaning and maintenance tasks on DEEBOT, turn the robot OFF and unplug the Docking Station.

1

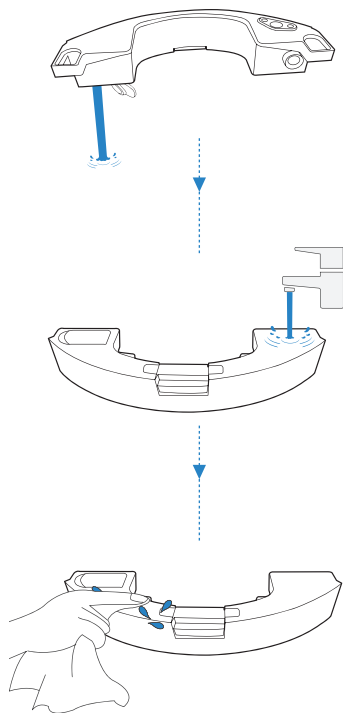


2



Washable Mopping Pad

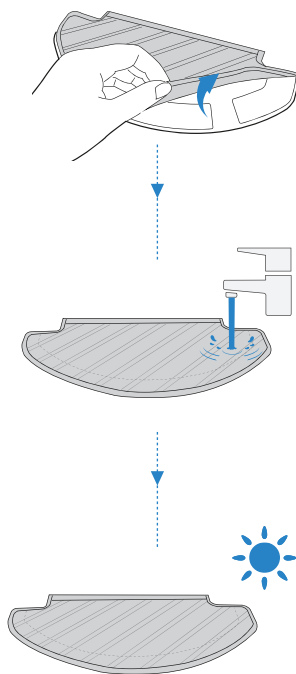

Wet Mopping Pad

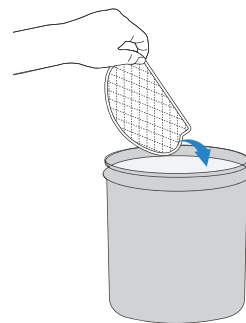


! Clean the water inlet filter on the bottom of the Reservoir if it is clogged.

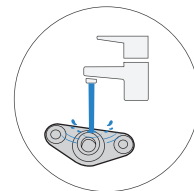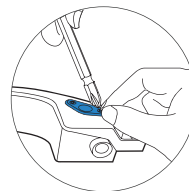


4. Maintenance/4.3 Dust Bin and Filters


1

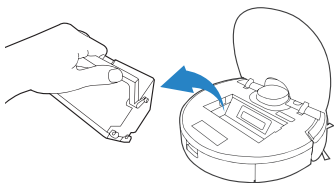


2

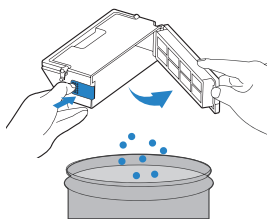


3

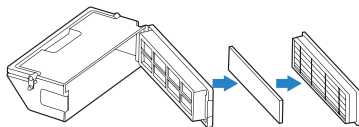


4

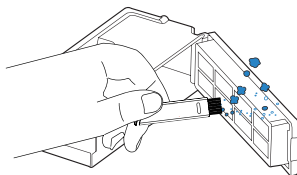


5

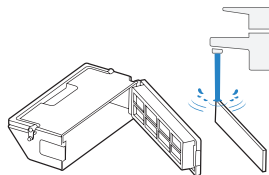

6

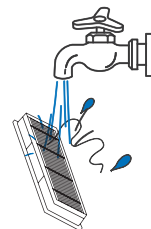

7

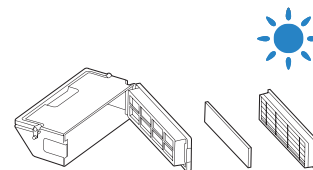

Note: 1. Please rinse the filter with water as shown above. 2. Do not use finger or brush to clean the filter. 3. Be sure to dry out the filter for at least 24 hours after washing.


For more information about replacement filters, please visit <https://www.ecovacs.com/global>

4. Maintenance/4.4 Main Brush and Side Brushes


Note: A Multi-Function Cleaning Tool is provided for easy maintenance. Handle with care, this cleaning tool has sharp edges.

Main Brush


1

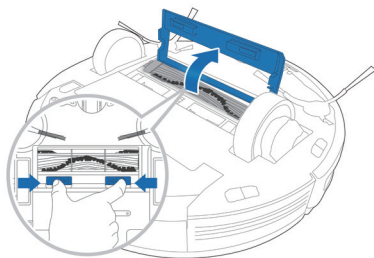


2

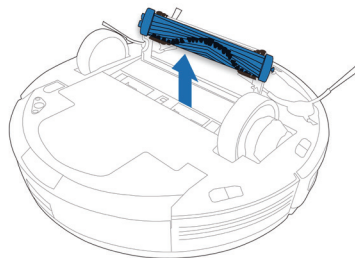

3






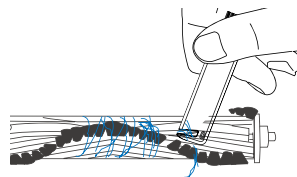


Side Brushes

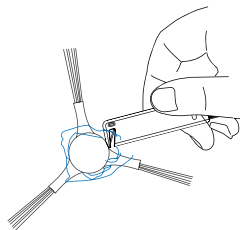

4. Maintenance/4.5 Other Components

Note: Before cleaning the robot's Charging Contacts and Docking Station Pins, turn the robot OFF and unplug the Docking Station.

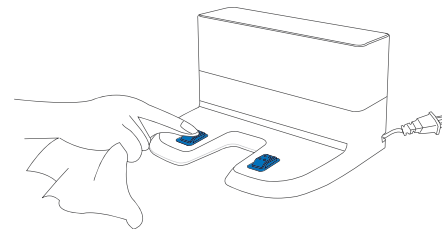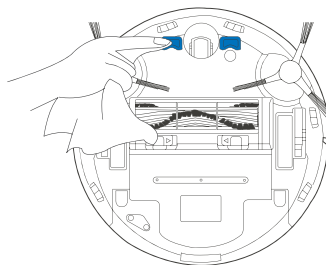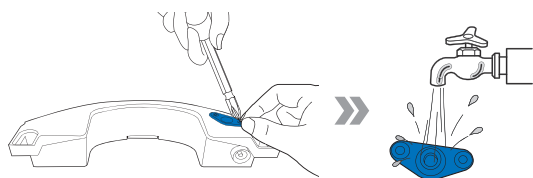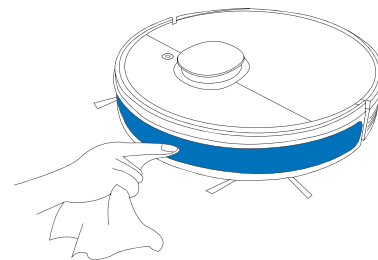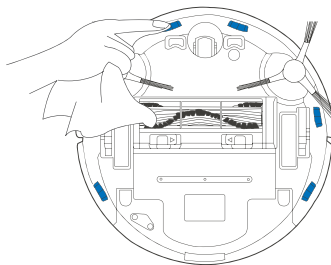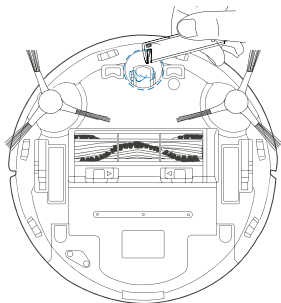

5. Indicator Light

DEEBOT will tell you something is wrong with an indicator light and voice report. More detailed support is available through the ECOVACS HOME and online website.

Indicator Light	Scenario
AUTO Mode Button glows a solid WHITE.	The robot is cleaning.
	The robot is paused while cleaning.
AUTO Mode Button flashes WHITE.	The robot is charging.
	The robot is starting.
	The robot is relocating.
AUTO Mode Button glows a solid RED.	The robot has low battery.
AUTO Mode Button flashes RED.	The robot has a problem.

6. Troubleshooting/6.1 Troubleshooting

No.	Malfunction	Possible Causes	Solutions
1	DEEBOT is not charging.	DEEBOT is not switched ON.	Switch ON DEEBOT.
		DEEBOT has not connected to the Docking Station.	Be sure that the robot's Charging Contacts have connected to the Docking Station Pins.
		The Power Cord is not connected to the Docking Station.	Make sure the Power Cord is firmly connected to the Docking Station.
		The battery is completely discharged.	Re-activate the battery. Switch ON. Place DEEBOT on the Docking Station by hand, remove after charging for 3 minutes, repeat 3 times; then charge normally.
		The Docking Station is not connected to the power supply.	Make sure the Docking Station is connected to the power supply.
2	DEEBOT cannot return to the Docking Station.	The Docking Station is not correctly placed.	Refer to section 3.3 to correctly place the Docking Station.
3	DEEBOT gets stuck while working and stops.	DEEBOT is tangled with something on the floor (electrical wires, curtains, carpet fringing, etc.).	DEEBOT will try various ways to free itself. If it is unsuccessful, manually remove the obstacles and restart.
4	DEEBOT returns to the Docking Station before it has finished cleaning.	When the battery gets low, DEEBOT automatically switches to Return to Charger Mode and returns to the Docking Station to recharge itself.	This is normal. No solution necessary.
		Working time varies according to floor surface, room complexity and the Cleaning Mode selected.	This is normal. No solution necessary.

No.	Malfunction	Possible Causes	Solutions
5	DEEBOT does not clean automatically at the scheduled time.	Time Scheduling function is cancelled.	Program DEEBOT to clean at specific times using the ECOVACS App.
		The Continued Cleaning function is turned ON and DEEBOT has just finished cleaning the scheduled cleaning area.	This is normal. No solution necessary.
		DEEBOT is switched OFF.	Switch ON DEEBOT.
		The robot's battery is low.	Keep DEEBOT switched ON and connected to the Docking Station to make sure it has a full battery to work at any time.
		The robot's Suction Intake is blocked and/or there is debris stuck in its components.	Power OFF DEEBOT, clean the Dust Bin and invert the robot. Clean the robot's Suction Intake, Side Brushes and the Main Brush as described in section 4.
6	DEEBOT does not clean the whole area.	The cleaning area is not tidy.	Remove small objects from the floor and tidy up the cleaning area before DEEBOT starts cleaning.
7	The water is not coming out of the Reservoir when DEEBOT is mopping.	The water inlet filter on the bottom of Reservoir is clogged.	Unscrew the water inlet on the bottom of Reservoir and clean the filter.
		The Reservoir runs out of water.	Add water into the Reservoir.
		The water outlets on the bottom of DEEBOT are clogged.	Check the water outlets on the bottom and clean.
8	DEEBOT is not able to connect to the home Wi-Fi network.	Incorrect home Wi-Fi username or password entered.	Enter the correct home Wi-Fi username and password.
		DEEBOT is not within range of your home Wi-Fi signal.	Make sure DEEBOT is within range of your home Wi-Fi signal.
		Network setup started before DEEBOT was ready.	Turn ON Power Switch. Press the RESET Button for 3 seconds. DEEBOT is ready for network setup when it plays a musical tune and its Wi-Fi Indicator light flashes slowly.

6. Troubleshooting/6.2 Wi-Fi Connection

Before Wi-Fi setup, make sure DEEBOT, mobile phone, and Wi-Fi network meet the following requirements.

DEEBOT and Mobile Phone Requirements

- DEEBOT is fully charged and the power switch of DEEBOT is turned on.
- Wi-Fi status light slowly flashes.
- Turn off mobile phone's cellular data (you can turn it back on after setup).

Wi-Fi Network Requirements

- You are using a 2.4GHz or 2.4/5 GHz mixed network.
- Your router supports 802.11b/g/n and IPv4 protocol.
- Do not use a VPN (Virtual Private Network) or Proxy Server.
- Do not use a hidden network.
- WPA and WPA2 using TKIP, PSK, AES/CCMP encryption.
- WEP EAP (Enterprise Authentication Protocol) is not supported.
- Use Wi-Fi channels 1-11 in North America and channels 1-13 outside North America (refer to local regulatory agency).
- If you are using a network extender/repeater, the network name (SSID) and password are the same as your primary network.

7. Technical Specifications

Model	DLN12		
Rated Input	20V === 1A		
Docking Station Model	CH1822		
Rated Input	100-240V ~ 50-60Hz 0.5A	Rated Output	20V === 1A
Frequency Bands	2400MHz-2483.5MHz		

Note: Technical and design specifications may be changed for continuous product improvement.
Output power of the Wi-Fi module is less than 100mW.

智生活 享人生

如遇根据本说明书无法妥善解决之问题, 请与我们的客服中心联系, 相关技术人员将会解答您的具体疑问或问题。

如需了解更多信息, 请访问科沃斯机器人官网: **www.ecovacs.com**

本公司保留对本产品进行技术和/或设计更改以持续改进的权利。

感谢您选择 DEEBOT!

目录

- 1.安全规范27
- 2.包装内容物29
- 3.操作和程序32
- 4.维护保养38
- 5.指示灯43
- 6.故障排除44
- 7.技术参数47

1. 安全规范

安全规范

使用本电气设备时,请务必始终遵循基本预防措施,包括以下注意事项:

使用本设备前,请先阅读所有说明

妥善保管相关说明

1. 本设备并非专供身体机能/感官/智力能力欠佳或知识经验不足的人士(包括儿童)使用,除非有安全负责人员对其使用本设备进行监督或指导。
2. 请对儿童进行监督,不要让儿童玩耍本设备。
3. 请先清理要打扫的区域。拿走地板上可能会缠住本设备的电线和小物件。将地毯流苏塞到地毯下,从地板上提起窗帘和桌布等物品。
4. 如果打扫区有台阶或楼梯等易跌落处,则应手动操作本设备,确保设备能检测到台阶,而不致于从边缘处跌落。可能需要在边缘处放置一个物理屏障,以防设备跌落。确保物理屏障不会导致绊倒。
5. 请仅按本手册中的说明使用设备。请仅使用制造商推荐或销售的附件。
6. 请确保所用电源的电压与充电站上标明的电压一致。
7. 仅限室内家用。请勿在户外、商业或工业环境中使用本设备。
8. 请仅使用制造商为本设备提供的原装充电电池和充电站。禁止使用非充电电池。有关电池的信息,请参阅“规格”章节。
9. 请勿在未安装尘盒和/或滤材的情况下使用本设备。
10. 请勿在有明火或易碎物品的区域操作本设备。
11. 请勿在极端温度环境下(温度低于 -5°C/23°F 或高于 40°C/104°F)使用本设备。
12. 请勿将毛发、宽松衣物、手指及所有身体部位靠近本设备的任何开口和活动部件。
13. 请勿在婴儿或小孩睡觉的房间内操作本设备。

14. 请勿在潮湿或有积水的表面使用本设备。
15. 请勿让本设备拾取大块物品,如石头、大片纸张或任何可能堵塞设备的物品。
16. 请勿使用设备拾取易燃或可燃物质(如汽油、打印机或复印机墨粉),请勿在可能出现易燃物的地方使用本设备。
17. 请勿使用设备拾取任何燃烧或冒烟物品,如香烟、火柴、热灰烬或任何可能引起火灾之物。
18. 请勿将物品放入吸入口。如果吸入口堵塞,请勿使用设备。避免吸入灰尘、棉绒、毛发或任何可能堵塞气流的物品。
19. 小心不要损坏电源线。请勿拉扯或拖拽设备或充电站的电源线,勿将电源线用作手柄,勿使电源线被门夹到,请勿在锋利的边缘或角落处拉扯电源线。请勿使运行的设备压到电源线。请使电源线远离发热表面。
20. 如果电源线损坏,必须由制造商或其服务代理商更换,以免发生危险。
21. 充电站一旦受损,请勿再用。电源线一旦受损或出问题,请勿维修或继续使用。
22. 请勿使用已损坏的电源线或插座。设备或充电站一旦运行失常、摔落、受损、置于户外或进水,请勿再用。必须由制造商或其服务代理商维修,以免发生危险。
23. 清洁或维护设备之前,先关闭电源开关。
24. 清洁或维护充电站之前,必须从插座上拔掉插头。
25. 拆卸电池处理设备之前,先从充电站上取下设备,并关闭设备上的电源开关。
26. 处理设备之前,必须根据当地法律法规的要求拆卸并丢弃电池。
27. 请按当地法律法规的要求处理废旧电池。
28. 即使设备已严重受损,仍请不要焚烧本设备。电池会在火中爆炸。
29. 如果长时间不使用充电站,请拔掉插头。


- 30. 必须按照本说明书中的说明使用本设备。对因使用不当造成的任何损害或伤害,科沃斯机器人公司概不负责。
- 31. 本主机中安装的电池仅可由熟练操作人员更换。若要更换主机电池,请联系客户服务。
- 32. 如果长时间不使用主机,请关闭主机的电源再进行存放,并且拔下充电站。
- 33. **警告:**只能使用本设备随附的可拆卸电源装置 CH1822 为电池充电。

为了满足射频暴露方面的要求,在设备操作期间,本设备与人之间应至少保持 20 厘米的距离。


为了确保合规,不建议在此距离以内操作本设备。本设备发射器所用天线不得与任何其他天线或发射器同时置于同一位置。

	II 类
	防短路安全隔离变压器
	开关式电源
	仅限室内使用
	直流电
	交流电

2.包装内容物/2.1 包装内容物

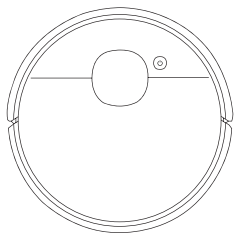


主机

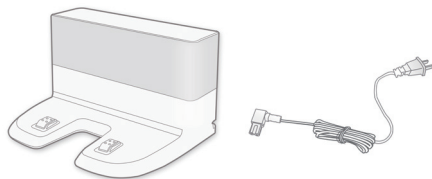


充电站




说明书




边刷



拖布支架



可水洗拖布




免洗湿拖布


注意：图示仅供参考,可能与实际产品的外观不同。
产品设计和规格如有变更,恕不另行通知。

2.包装内容物/2.2 部件名称


主机

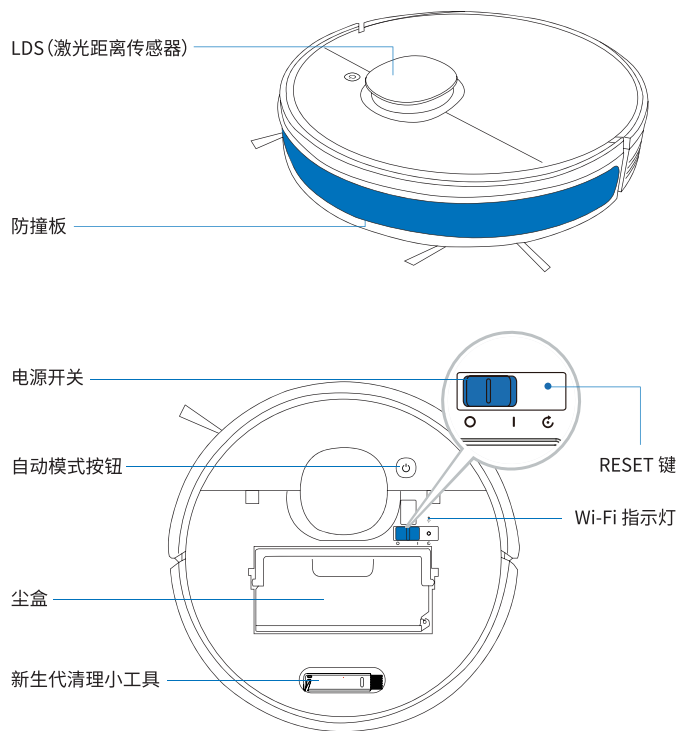


底视图

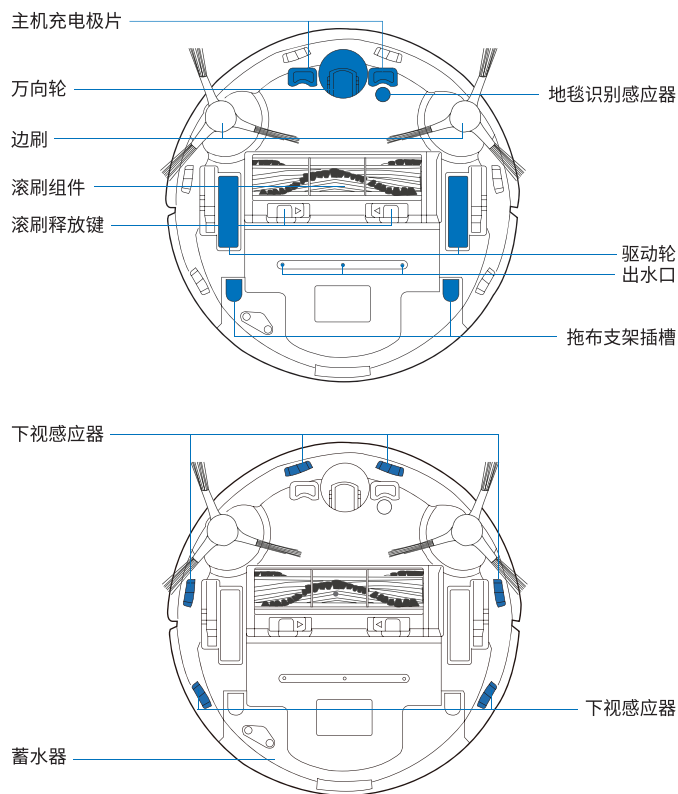


尘盒

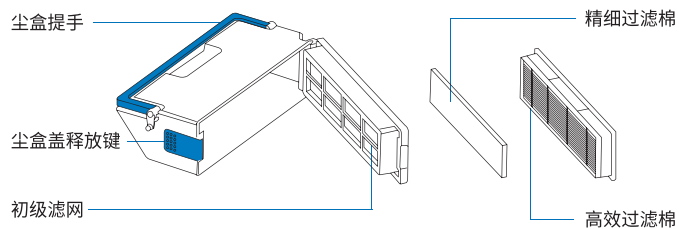

充电站

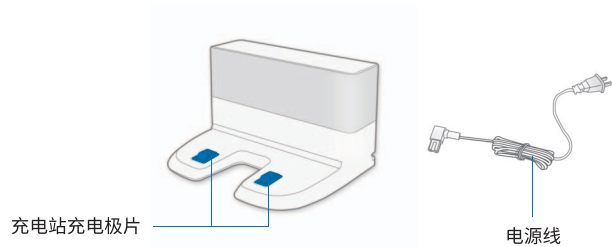


蓄水器

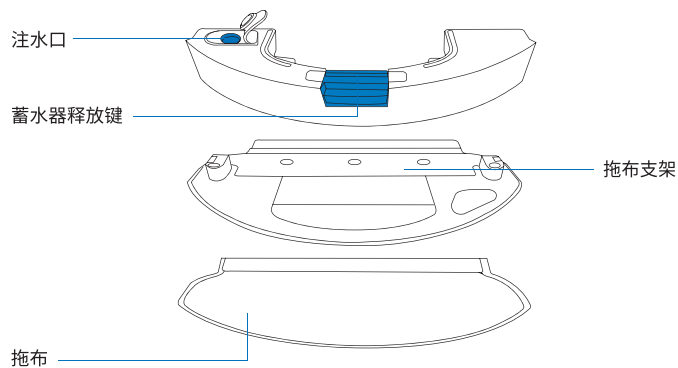


3.操作和程序/3.1 清洁前的注意事项


清理要打扫的区域,把椅子等家具摆放在适当位置。

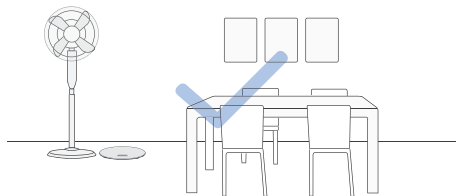

首次使用时,务必打开所有房间的房门,帮助 DEEBOT 充分了解全屋布局。

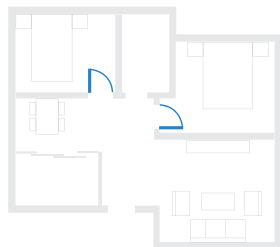

可能需要在边缘处放置一个物理屏障,以防止设备从边缘处跌落。

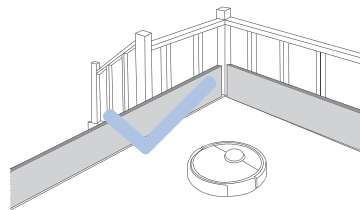

拿走地板上的其他物品(如电缆、衣物和拖鞋),以提高清洁效率。






在带流苏的地毯上使用本产品前,请先将流苏藏到地毯下。




请勿站在走廊等狭小空间内,并确保 LDS(激光距离传感器)并未堵塞。

3.操作和程序/3.2 快速入门


1 取下保护带和保护膜

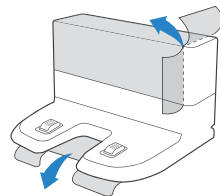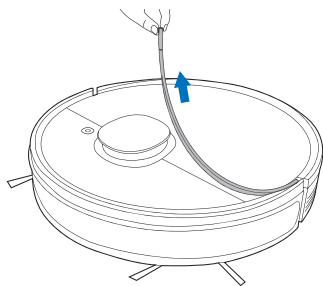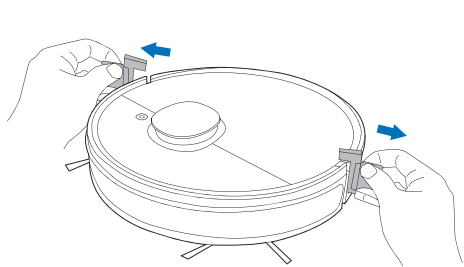

2 组装充电站

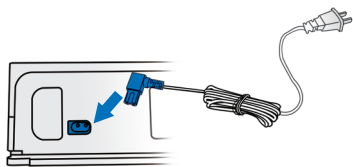


3 安装边刷

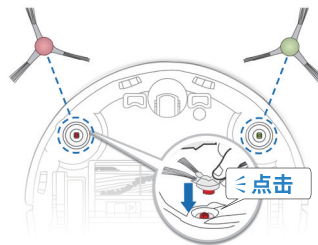


3.操作和程序/3.3 为 DEEBOT 充电

1 放置充电站

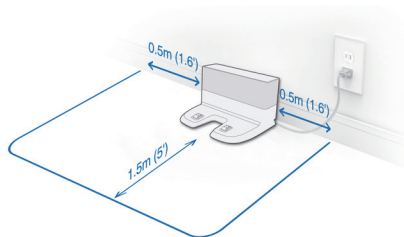



2 打开电源

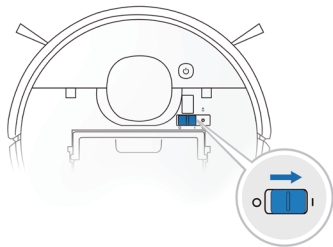

注意: I = 开, O = 关。

! DEEBOT 无法在电源关闭时充电。

3 为 DEEBOT 充电

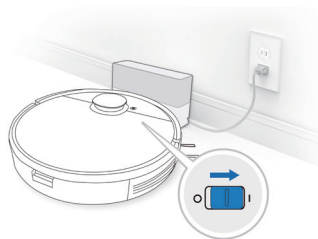

注意: 当 DEEBOT 完成打扫程序或当电池电量不足时, DEEBOT 会自动返回充电站进行充电。也可以随时通过 ECOVACS App 或按住主机上的 AUTO 键 3 秒钟使 DEEBOT 返回充电站。

请倒掉蓄水器中的剩水, 取下拖布支架, 然后再为 DEEBOT 充电。

3.操作和程序/3.4 ECOVACS HOME App

要使用所有可用功能, 建议通过 ECOVACS HOME App 控制 DEEBOT。

开始前, 请确保:

- 您的手机已连接 Wi-Fi 网络。
- 您的路由器已启用 2.4GHz 频段无线信号。
- DEEBOT 上的 Wi-Fi 指示灯缓慢闪烁。



Wi-Fi 指示灯



	缓慢闪烁	已断开 Wi-Fi 连接或正在等待 Wi-Fi 连接
	快速闪烁	正在连接 Wi-Fi
	常亮	已连接 Wi-Fi

提示: 如果在 Wi-Fi 设置过程中遇到任何问题, 请参考本手册中的“故障排除 > Wi-Fi 连接”部分。


3.操作和程序/3.5 操作 DEEBOT

首次清洁时, 请注意观察 DEEBOT, 并在发生时予以协助。

1 启动

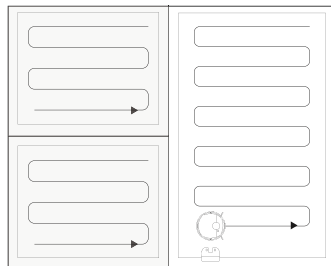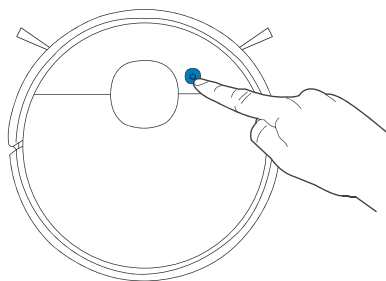


2 暂停

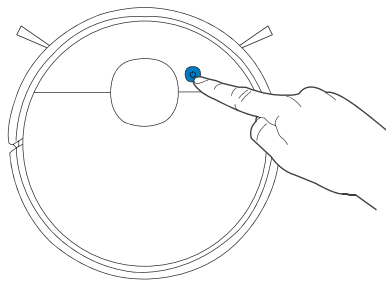

3 返回充电


按住  3 秒钟, 可让 DEEBOT 返回充电站。

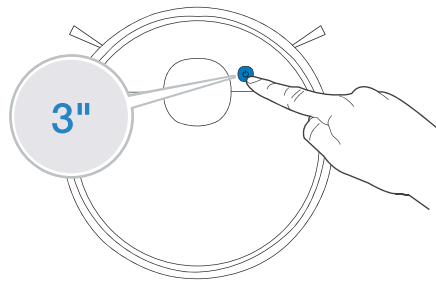


注意: 主机在暂停几分钟后, 控制面板会停止发光。按下 DEEBOT 的自动模式按钮可唤醒主机。

3.操作和程序/3.6 OZMO 拖布组件

- 1 **注意：**为延长蓄水器的使用寿命，建议将纯净水或软化水用于 OZMO 拖布组件。

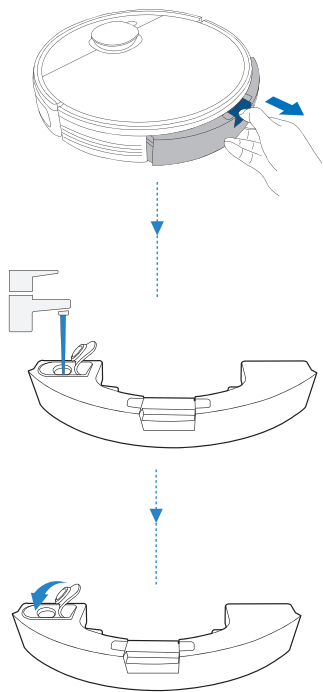

- 2 **注意：**DEEBOT 在拖地时，将会自动检测并远离地毯。如需打扫地毯，请先卸下拖布支架。

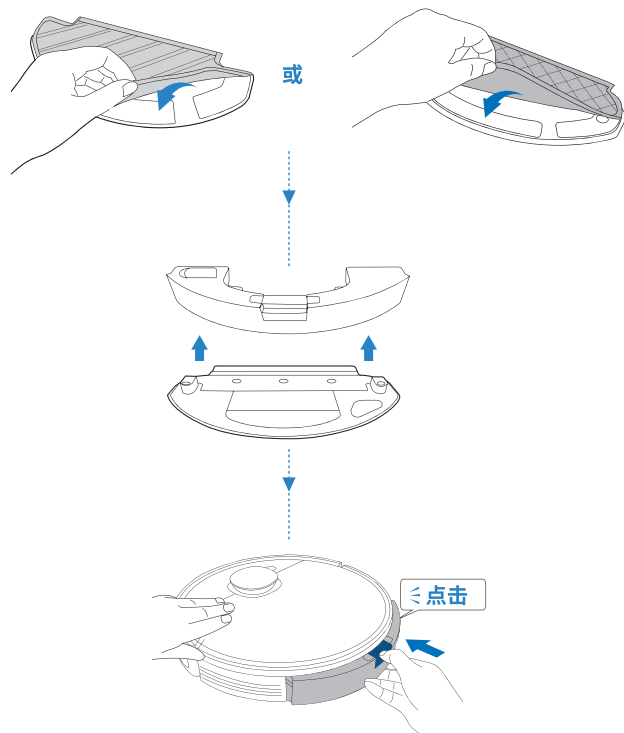

4.维护保养/4.1 定期维护

为确保 DEEBOT 维持最高的运行性能, 请参照下表定期进行维护并更换零部件:

主机零部件	维护频率	更换频率
免洗湿拖布	/	每次使用后
可水洗拖布	每次使用后	每洗 50 次
蓄水器/拖布支架	每次使用后	/
边刷	每 2 周一次	每 3-6 个月一次
滚刷	每周一次	每 6-12 个月一次
精细过滤棉/高效过滤棉	每周一次	每 3-6 个月一次
LDS (激光距离传感器) 万向轮 下视感应器 防撞板 主机充电极片 充电站充电极片	每周一次	/


本产品随附新生代清理小工具, 便于进行维护。本产品清洁工具较锋利, 请小心存放。

注意: 科沃斯生产各种零部件及配件。有关更换零部件的更多信息, 请联系客户服务。

4. 维护保养 /4.2 OZMO 拖布组件


在对 DEEBOT 进行清洁和维护之前, 先将主机关机, 并拔下充电站。

1

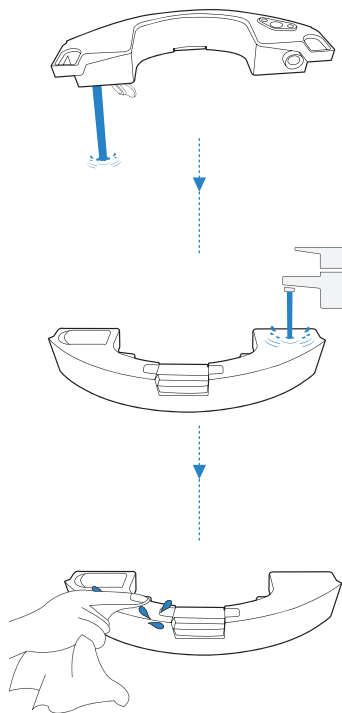


2



可水洗拖布

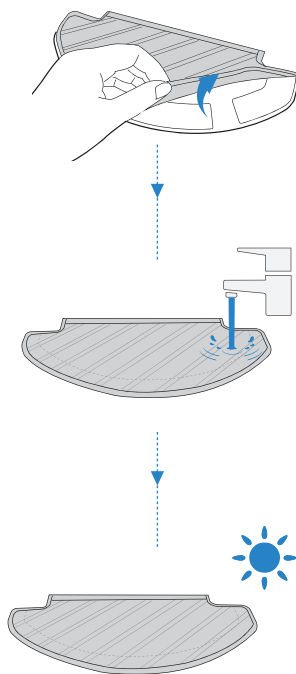

免洗湿拖布

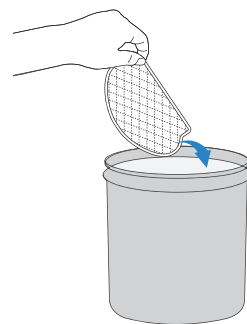


❗ 如果蓄水器底部的注水口滤材堵塞, 请将其清洗干净。

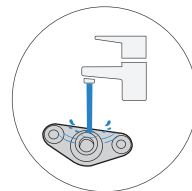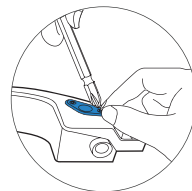


4. 维护保养 /4.3 尘盒和滤材


1

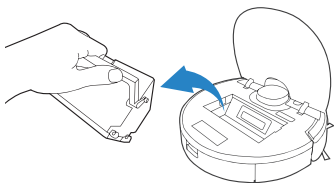


2

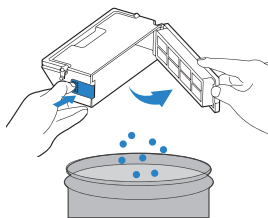


3

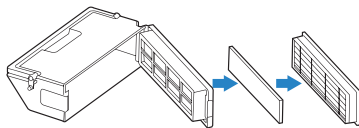


4

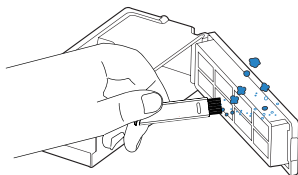


5

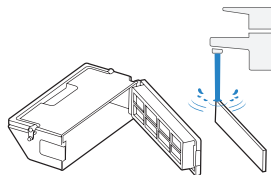

6

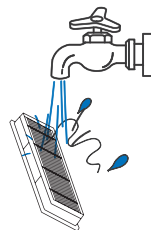

7

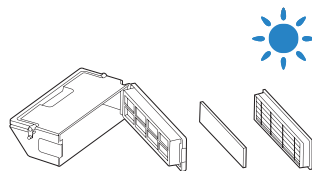

注意：1.如上所示，请用水冲洗滤材。2.请勿使用手指或刷子清洁滤材。3.清洗后，请确保将滤材干燥至少 24 小时。


有关更换滤材的更多信息，请访问 <https://www.ecovacs.com/global>。

4. 维护保养 /4.4 滚刷和边刷


注意: 本产品随附新生代清理小工具, 便于进行维护。本产品清洁工具较锋利, 请小心存放。

滚刷


1

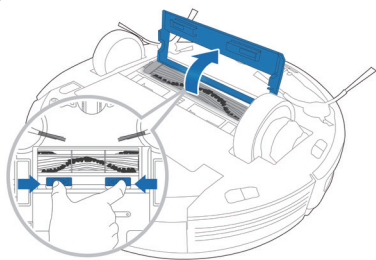


2

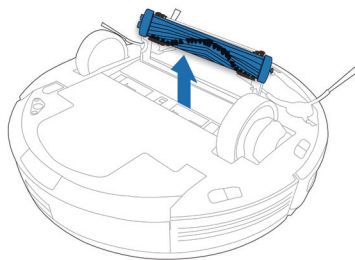

3






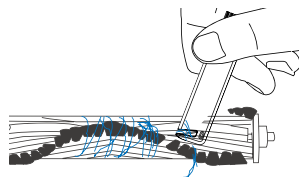


边刷

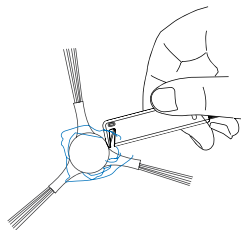

4. 维护保养 /4.5 其他组件

注意: 清洁主机的主机充电极片和充电站充电极片之前, 先将主机关机, 并拔下充电站。

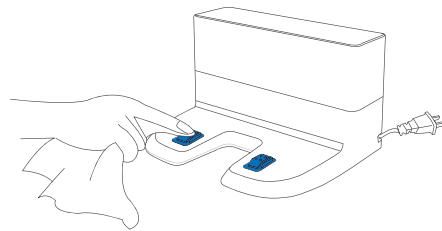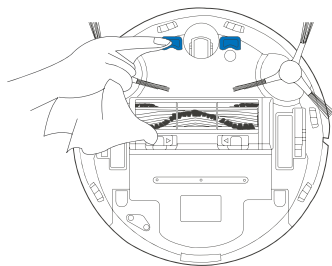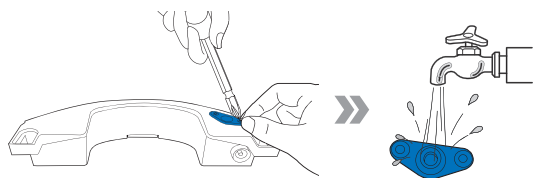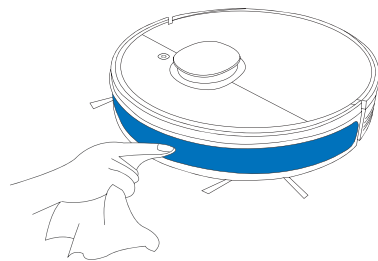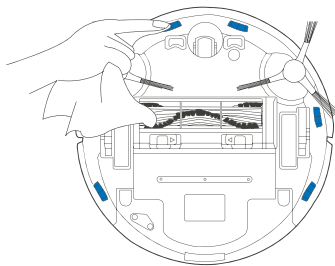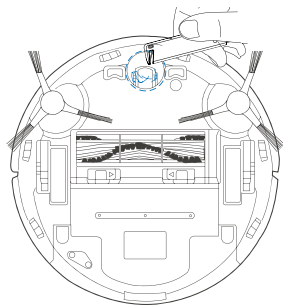

5. 指示灯

DEEBOT 将通过指示灯和语音播报告知所发生的错误。可通过 ECOVACS HOME 和在线网站获取更多详细支持信息。

指示灯	场景
自动模式按钮常亮白光。	主机正在打扫。
	主机在打扫时暂停。
自动模式按钮闪烁白光。	主机正在充电。
	主机正在启动。
	主机正在重新定位。
自动模式按钮常亮红光。	主机电量低。
自动模式按钮闪烁红光。	主机发生故障。

6. 故障排除 /6.1 故障排除

序号	故障	可能原因	解决方案
1	DEEBOT 未充电。	DEEBOT 未开机。	将 DEEBOT 开机。
		DEEBOT 没有连接到充电站。	确保主机的主机充电极片已连接到充电站充电极片上。
		电源线未连接到充电站。	确保电源线已牢固连接到充电站。
		电池电量完全耗尽。	重新激活电池。开机。用手将 DEEBOT 放在充电站上, 充电 3 分钟后取下, 如此重复 3 次; 然后正常充电。
		充电站未连接电源。	确保充电站已连接电源。
2	DEEBOT 无法返回充电站。	充电站未正确放置。	请参阅第 3.3 节正确放置充电站。
3	DEEBOT 在工作时卡住并停止。	DEEBOT 被地板上的物品 (电线、窗帘、地毯流苏等) 缠住。	DEEBOT 会尝试各种办法来摆脱束缚。如果不成功, 请手动解开缠绕物并重新启动。
4	DEEBOT 还没打扫完就返回充电站。	当电池电量不足时, DEEBOT 会自动切换到“返回充电器模式”, 并自行返回充电站充电。	这是正常现象。无需执行任何操作。
		工作时间因地板表面状况、房间复杂程度及选择的清扫模式而异。	这是正常现象。无需执行任何操作。

序号	故障	可能原因	解决方案
5	DEEBOT 未在预约的时间自动打扫。	定时预约功能被取消。	使用 ECOVACS App, 设置 DEEBOT 在指定时间打扫。
		断点续扫功能已打开, 并且 DEEBOT 刚打扫完指定打扫区。	这是正常现象。无需执行任何操作。
		DEEBOT 已关机。	将 DEEBOT 开机。
		主机的电池电量不足。	使 DEEBOT 保持开机状态并连接到充电站, 确保它有足够电量能随时投入工作。
		主机的吸入口被堵塞和/或其部件中有碎屑。	将 DEEBOT 关机, 清理尘盒, 然后翻转主机。如第 4 节所述, 清理主机的吸入口、边刷和滚刷。
6	DEEBOT 并未打扫整个区域。	清理区地面不平整。	拿走地板上的小物件, 整理清理区, 然后再让 DEEBOT 开始打扫。
7	DEEBOT 在拖地时, 蓄水器不出水。	蓄水器底部的注水口滤材堵塞。	拧下蓄水器底部的注水口, 并清洗滤材。
		蓄水器中没有水。	向蓄水器中加水。
		DEEBOT 底部的出水口堵塞。	检查底部出水口并清理干净。
8	DEEBOT 无法连接到家用 Wi-Fi 网络。	输入的家用 Wi-Fi 用户名或密码错误。	输入正确的家用 Wi-Fi 用户名和密码。
		DEEBOT 未在家用 Wi-Fi 信号的覆盖范围内。	确保 DEEBOT 位于家用 Wi-Fi 信号的覆盖范围内。
		DEEBOT 尚未准备好就开始了网络设置。	打开电源开关。按下 RESET 键 3 秒钟。当 DEEBOT 播放音乐并且 Wi-Fi 指示灯缓慢闪烁时, 表示 DEEBOT 已经准备好进行网络设置。

6. 故障排除 /6.2 Wi-Fi 连接

设置 Wi-Fi 前, 请确保 DEEBOT、手机和 Wi-Fi 网络符合以下要求。

DEEBOT 和手机要求

- DEEBOT 已充满电且已打开 DEEBOT 电源开关。
- Wi-Fi 状态灯缓慢闪烁。
- 关闭手机的移动数据 (完成设置后, 可重新开启)。

Wi-Fi 网络要求

- 使用 2.4GHz 或 2.4/5 GHz 混合网络。
- 路由器支持 802.11b/g/n 和 IPv4 协议。
- 切勿使用 VPN (虚拟专用网络) 或代理服务器。
- 切勿使用隐藏的网络。
- 使用 TKIP、PSK、AES/CCMP 加密的 WPA 和 WPA2。
- 不支持 WEP EAP (企业认证协议)。
- 在北美地区使用 Wi-Fi 信道 1-11, 在北美以外地区使用 Wi-Fi 信道 1-13 (请咨询当地监管机构)。
- 如果使用网络扩展器/中继器, 则网络名称 (SSID) 和密码与主网络相同。

7. 技术参数

型号	DLN12		
额定输入	20V === 1A		
充电站型号	CH1822		
额定输入	100-240V ~ 50-60Hz 0.5A	额定输出	20V === 1A
频段	2400MHz-2483.5MHz		

注意：为持续进行产品改进,技术和设计规格可能会更改。
Wi-Fi 模块输出功率小于 100mW。

智生活，享人生。

若遇到說明書無法解決的問題，請聯繫我們的售後服務中心，專業人員將能協助您解決問題。

若需更多資訊，請至 ECOVACS ROBOTICS 官網：www.ecovacs.com

本資料產品以實物為準，原廠保留產品更新的權利，如有變動，恕不另行通知。

感謝您選擇 DEEBOT!

目錄

1.安全規範	50
2.包裝內容	52
3.產品使用	55
4.維護保養	61
5.指示燈	66
6.故障排除	67
7.技術規格	70

1.安全規範

安全規範

使用電器設備時，應務必遵守基本注意事項，包括下列各項：

使用本產品前請仔細閱讀所有說明

請妥善保管說明書

1. 除非有負責其安全者監督或解說如何使用本產品，否則兒童以及生理、感官或精神能力不足或缺乏相關經驗與知識者，不可使用本產品。
2. 請看好兒童，確保他們不會將本產品當作玩具。
3. 清潔前請先清空需要清潔的位置。移除地板上可能會纏繞本產品的電源線和小型物品。將地毯的流蘇邊塞到地毯下，並將窗簾和桌布等物品提高，使其不會接觸到地板。
4. 如有臺階或樓梯等懸空區域，請先測試產品，看其是否可以偵測到臺階而不會從邊緣掉落。如有掉落的風險，則必須在邊緣放置實體柵欄，以防止本產品掉落。請確保實體柵欄不會導致絆倒。
5. 請僅依照說明書所述的方式使用產品。請僅使用製造商推薦或銷售的附件。
6. 確保電源電壓符合充電站上標註的電壓。
7. 僅供居室內使用。請勿在戶外、商業或工業環境中使用本產品。
8. 僅使用製造商專配的原裝可充電電池及充電站。嚴禁使用非充電式電池。如需電池資訊，請參閱〈規格〉一節。
9. 請勿在未安裝塵盒和/或濾材的情況下使用本產品。
10. 請勿在有點燃蠟燭或易碎物品的區域內操作本產品。
11. 請勿在極熱或極冷（低於 -5°C/23°F 或者高於 40°C/104°F）的環境中使用產品。
12. 請讓頭髮、寬鬆的衣服、手指和身體的所有部位遠離任何開口和運作零件。
13. 請勿於嬰幼兒正在睡覺的房間內操作本產品。
14. 請勿在潮濕或積水的表面上使用本產品。

15. 請勿讓本產品吸入大型物品（例如石頭）、大型紙張或任何可能堵塞本產品的物品。
16. 請勿使用本產品吸取易燃物或可燃物（例如汽油、印表機或影印機碳粉），或在可能有這些物品的區域內使用本產品。
17. 請勿使用本產品吸取任何正在燃燒或冒煙的物品，例如香煙、火柴、灰燼，或任何可能引起火災的物品。
18. 請勿將物品放入吸口處。吸口處堵塞時請勿使用本產品。請清理吸口處的灰塵、棉絮、毛髮，或任何可能會減少氣流的物品。
19. 請小心不要損壞電源線。禁止利用電源線拖曳或提拉產品及產品充電站，禁止將電源線當作把手，禁止把電源線夾在門縫裡，禁止在尖銳和彎角處拉動電源線。請勿讓本產品輾過電源線。請讓電源線遠離高溫表面。
20. 如果電源線損壞，則必須由製造商或其維修代理商進行更換，以避免危險。
21. 禁止使用損壞的充電站。電源供應器不可維修，若發生損壞或故障，則不應再使用。
22. 電源線或插座已損壞時，請勿使用本產品。當產品或充電站因跌落、損壞、室外使用或進水導致無法正常工作時，請勿使用。必須由製造商或其維修代理商進行維修，以防危險。
23. 在清理或保養本產品前，請先「關閉」電源開關。
24. 在清潔和維護充電站前必須先將插頭從電源插座拔出。
25. 在丟棄產品前，請先將產品從充電站上取下，關閉產品電源開關並取出電池。
26. 在丟棄本產品前，必須先按照當地的法律和法規取出並丟棄電池。
27. 請按照當地的法律和法規處理舊電池。
28. 即使本產品已嚴重損壞，也請勿焚燒。電池在火中可能會爆炸。
29. 若長時間不使用充電站，請將充電站斷電。
30. 請務必依照本說明書中的指示使用本產品。如因不當使用造成任何損害或傷害，ECOVACS ROBOTICS 概不負責。

31. 本主機包含僅可由專業人員更換的電池。若需更換主機電池，請聯絡客戶服務。
32. 若長時間不使用產品，將主機關機存放，並拔除充電站電源。
33. **警告：**若要為電池充電，請僅使用本產品隨附的外接式供電裝置 CH1822。

為了滿足降低射頻輻射危害的要求，設備天線與人員之間必須至少保持 20 cm 以上的距離。

切勿把該發射器與其它任何天線或發射器放在一起，也不能與其它任何天線或發射器配合操作。

低功率電波輻射性電機管理辦法

第十二條

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

設備名稱：掃地機器人 型號：DLN12						
單元	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr ⁺⁶)	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
硬膠件	○	○	○	○	○	○
軟膠件	○	○	○	○	○	○
五金件	—	○	○	○	○	○
電子元器件	—	○	○	○	○	○
備考 1. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。						
備考 2. “—” 係指該項限用物質為排除項目。						


	Class II
	短路防護安全隔離變壓器
	交換式電源供應器
	供室內使用
	直流電
	交流電

 R31495
RoHS


 此設備內含無線模組
CCAG17LP0310T7

公司名稱：聯強國際股份有限公司
地址：台北市民生東路三段75號4樓
電話：02-25063320

2.包裝內容/2.1 包裝內容

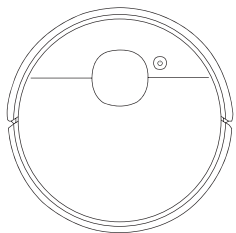


主機

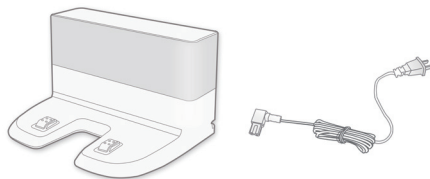


充電站




說明書




邊刷



拖地布支架



可清洗拖地布




拖地濕巾



請注意：圖片與示意圖僅供參考，可能會與實際產品外觀不同。
產品設計與規格如有變更，恕不另行通知。

2.包裝內容/2.2 組件名稱


主機

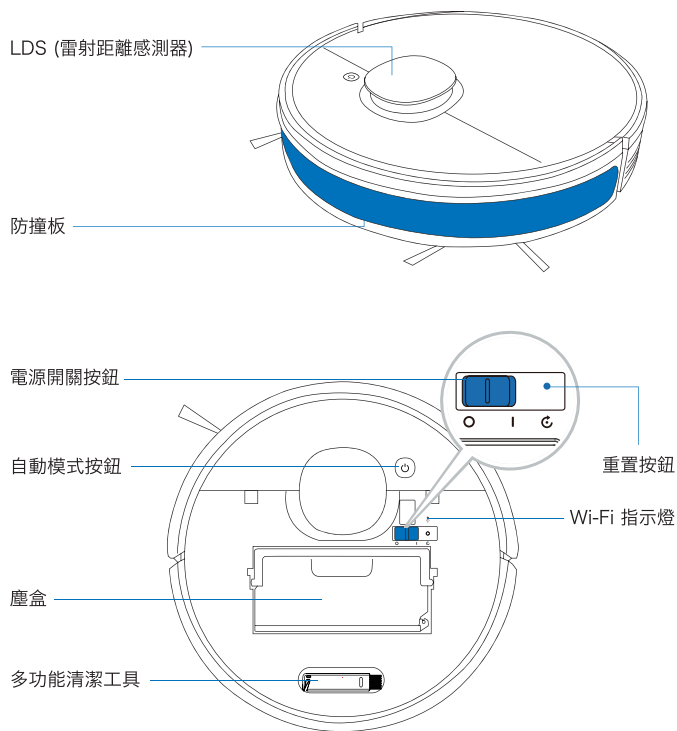


底部視圖

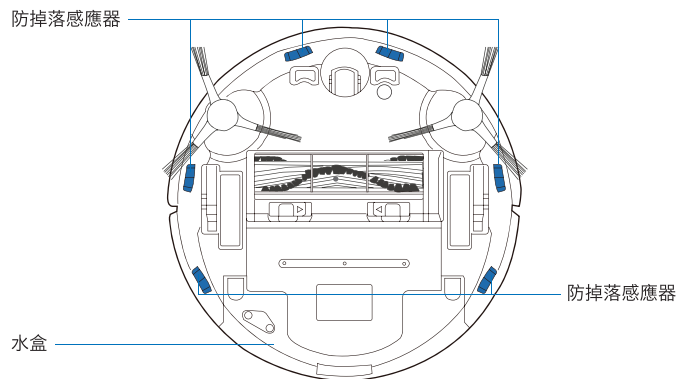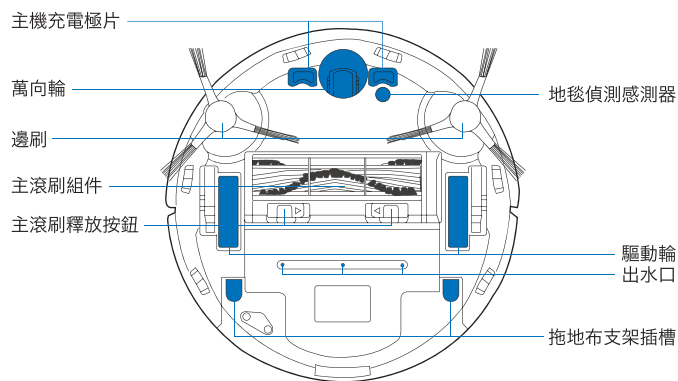


塵盒

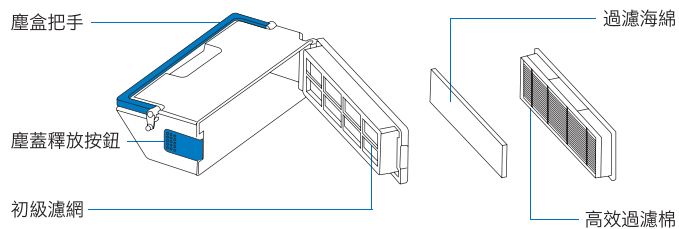

充電站

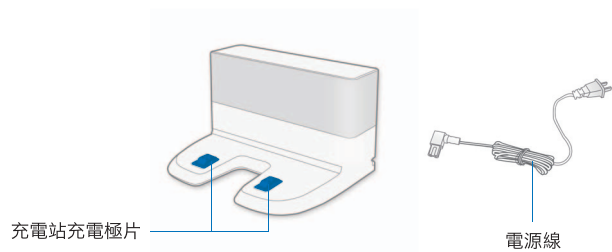


水盒

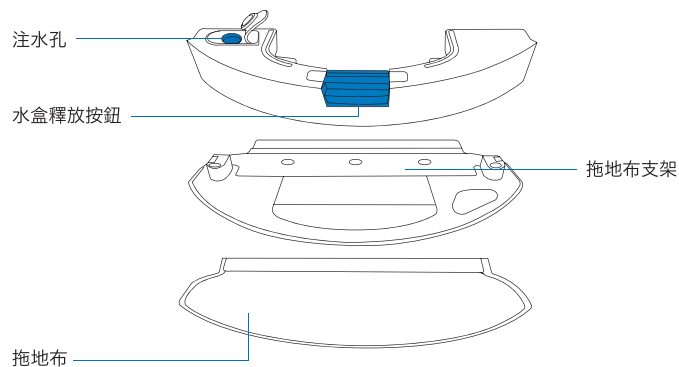


3.產品使用/3.1 清掃前注意事項


整理需要清掃的位置，將家具 (例如椅子) 放在適當的位置。

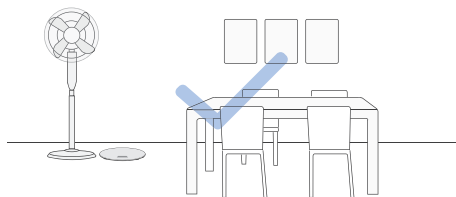

首次使用時，請確定已開啟每個房門，讓 DEEBOT 可以完整探索您的房子。

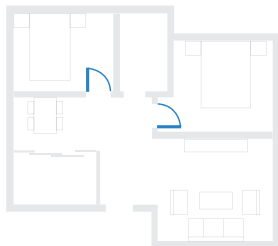

建議於階梯邊緣放置實體柵欄，以確保產品安全工作。

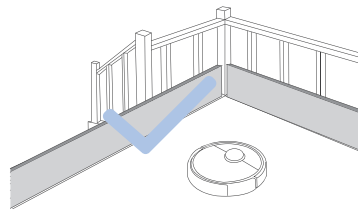

將地面上的物品收好，例如纜線、衣物和拖鞋等，以改善清掃效率。






請將地毯邊緣收起或於短毛地毯上工作。




請勿站立於走廊等狹窄空間，並確保不會阻擋到 LDS 雷射距離感應器。

3. 產品使用/3.2 快速操作


1 移除保護條與保護膜

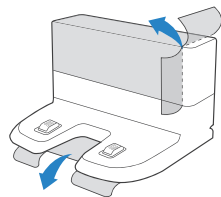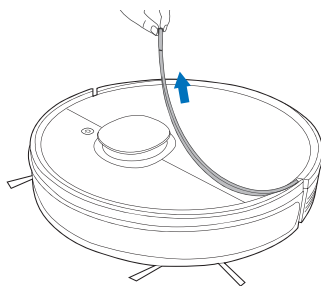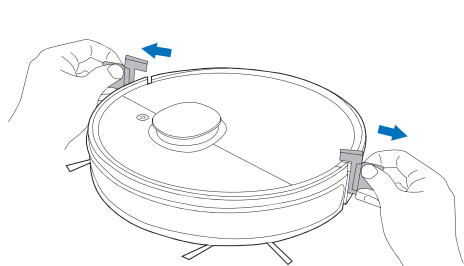

2 組裝充電站

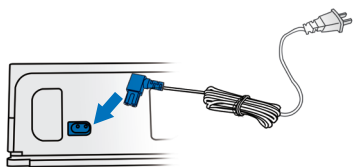


3 安裝邊刷

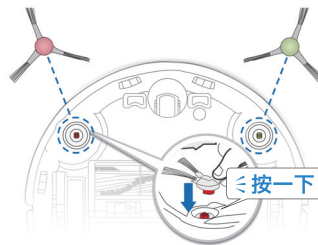


3. 產品使用/3.3 DEEBOT 充電

1 安放充電站

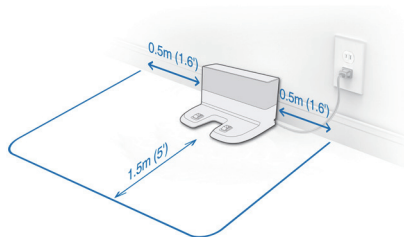


2 打開主機

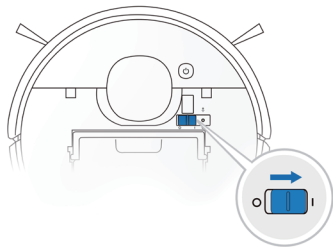

請注意：I = 開啟，O = 關閉。

! DEEBOT 關機時無法充電。

3 主機充電

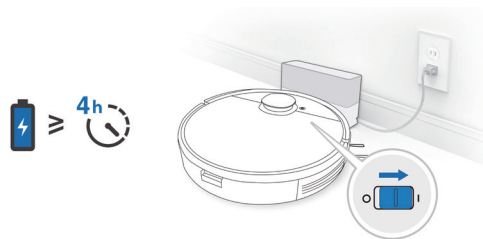

請注意：主機完成清掃或感知電量不足時會自動返回充電。也可以透過使用 ECOVACS App 或按下主機 AUTO 按鈕 3 秒，隨時指示主機返回充電站。

充電前，請將水箱中的水倒乾，並移除拖地布支架。

3.產品使用/3.4 ECOVACS HOME App

建議透過 ECOVACS HOME App 控制您的 DEEBOT 來享受所有可用的功能。

在您開始前，請先確認以下幾點：

- 您的手機已經連線至 Wi-Fi 網路。
- 您的路由器已經啟用 2.4GHz 波段的無線訊號。
- DEEBOT 上的 Wi-Fi 指示燈正在緩慢閃爍。



Wi-Fi 指示燈



	緩慢閃爍	中斷 Wi-Fi 連線或等待 Wi-Fi 連線
	快速閃爍	正在連線至 Wi-Fi
	恆亮	已連線至 Wi-Fi

提示： 如果您在 Wi-Fi 設定過程中有任何問題，請參閱說明書中的「故障排除」>「Wi-Fi 連線」一節。


3. 產品使用 /3.5 使用 DEEBOT

DEEBOT 首次清掃時，請在旁監控。如途中產生問題，請協助解決。

1 啟動清掃

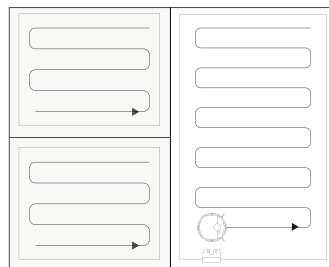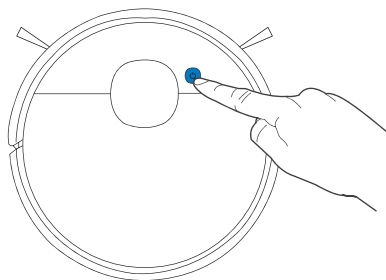


2 暫停運作

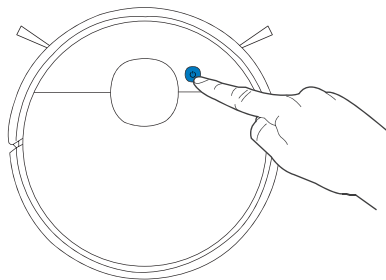

3 返回充電


按下  3 秒，讓 DEEBOT 返回充電站。

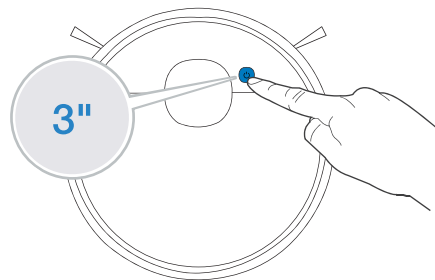


請注意：主機暫停工作超過幾分鐘後，控制面板會熄滅。按下 DEEBOT 上的自動模式按鈕立即喚醒主機。

3. 產品使用/3.6 OZMO 拖地布組件

- 1 **請注意：**建議 OZMO 拖地布組件使用純水或軟水，以延長水盒的使用壽命。

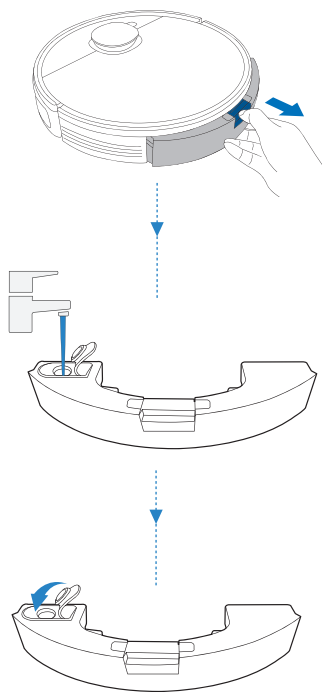

- 2 **請注意：**在拖地時，DEEBOT 會自動偵測到地毯並遠離它。若您需要清掃地毯，請先卸除拖地布支架。

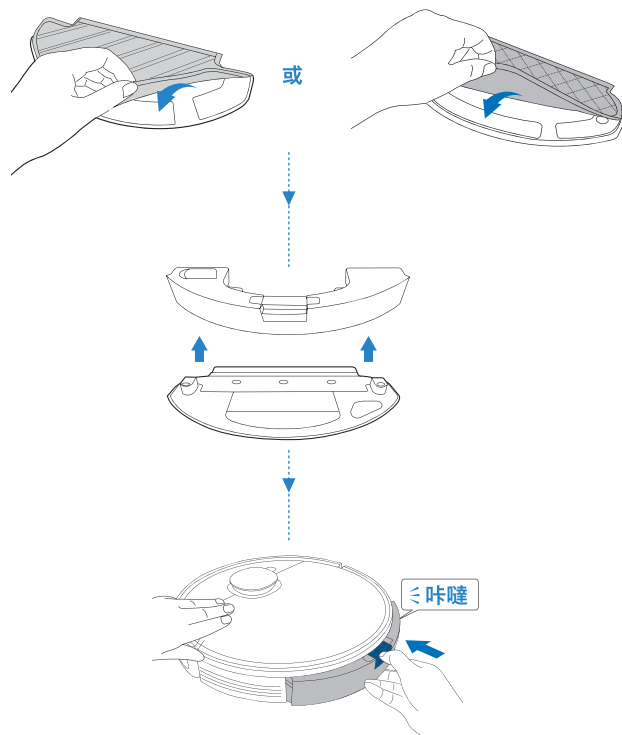

4.維護保養/4.1 定期保養

如需主機運轉保持最佳性能，請依照下列建議進行維護保養和配件更換。

主機零件	保養頻率	更換頻率
拖地濕巾	/	每次使用後
可清洗拖地布	每次使用後	每清洗 50 次
水盒/拖地布支架	每次使用後	/
邊刷	每 2 週 1 次	每 3-6 個月
主滾刷	每週 1 次	每 6-12 個月
過濾海綿/高效過濾棉	每週 1 次	每 3-6 個月
LDS (雷射距離感測器) 萬向輪 防掉落感應器 防撞板 主機充電極片 充電站充電極片	每週 1 次	/


建議搭配使用多功能清潔工具效果更佳。此清潔工具的邊緣相當銳利，請小心拿取。

請注意：ECOVACS 生產各種替換配件。如需有關更換零件的詳細資訊，請聯絡客戶服務。

4. 維護保養 / 4.2 OZMO 拖地布組件


進行保養時，請先關閉主機，並拔下充電站電源，以策安全。

1

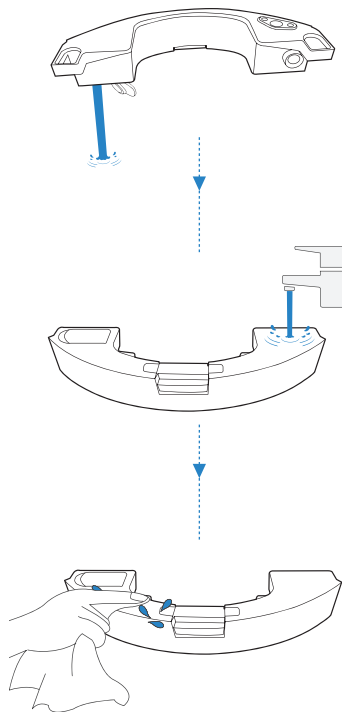


2



可清洗拖地布

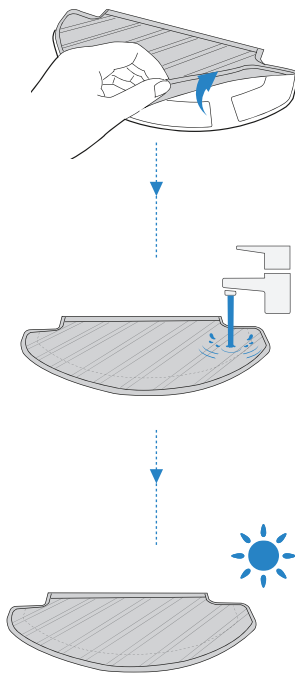

拖地濕巾

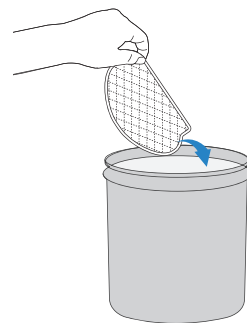


! 若水盒底部的注水孔濾材堵塞，請將其確實清理。

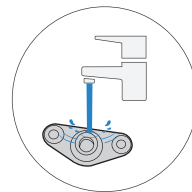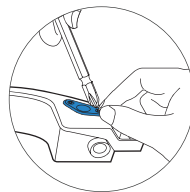


4. 維護保養 / 4.3 塵盒與濾材


1

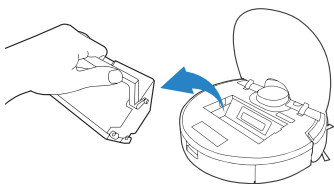


2

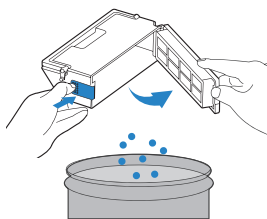


3

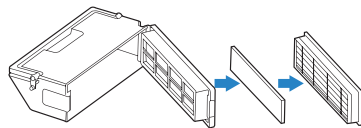


4

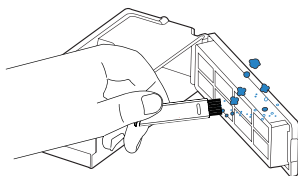


5

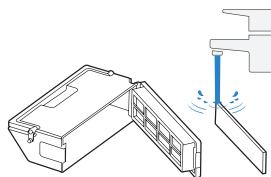

6

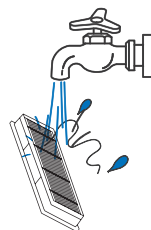

7

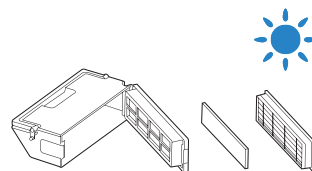

請注意：1. 請用水沖洗濾材，如上所示。 2. 請勿使用手指或刷子來清洗濾材。 3. 務必在清洗過濾材後 24 小時內使之恢復乾燥。


如需有關更換濾材的詳細資訊，請至 <https://www.ecovacs.com/global>。

4. 維護保養 / 4.4 主滾刷與邊刷


請注意：建議搭配使用多功能清潔工具效果更佳。此清潔工具的邊緣相當銳利，請小心拿取。

主滾刷


1

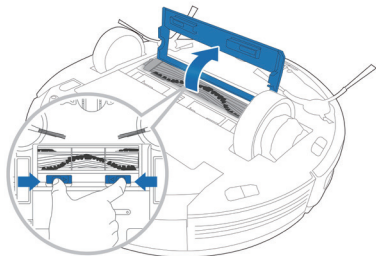


2

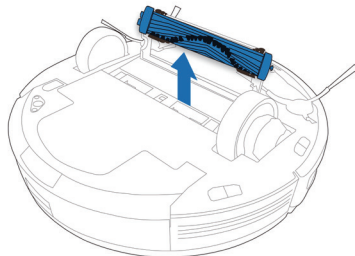

3






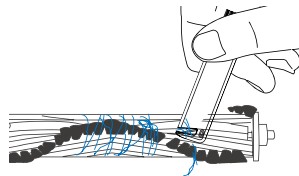


邊刷

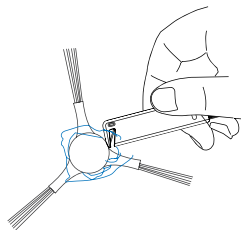

4. 維護保養/4.5 其他組件

請注意：在清理主機充電極片與充電站充電極片之前，請先關閉主機，並拔下充電站電源，以策安全。

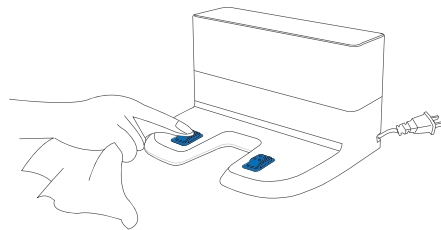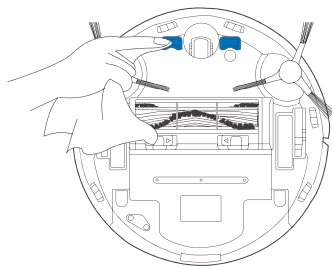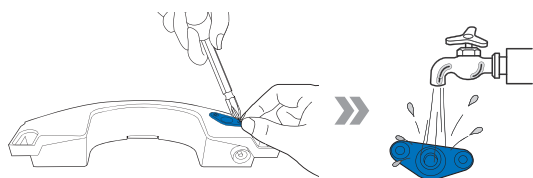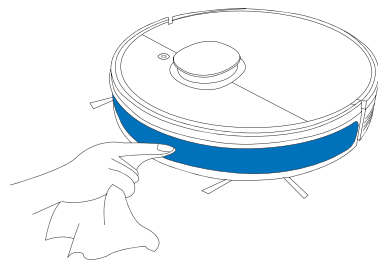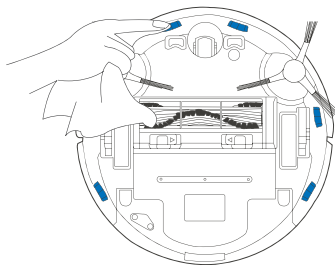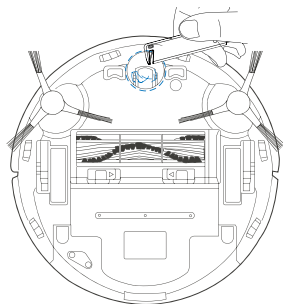

5.指示燈

DEEBOT 會在出現問題時透過指示燈以及語音提示告知您。ECOVACS HOME 與線上網站有更多詳細的支援資訊。

指示燈	狀況
自動模式按鈕發出穩定白光。	主機正在清掃中。
	主機在清掃時暫停。
自動模式按鈕發出閃爍白光。	主機正在充電中。
	主機正在啟動。
	主機正在重新定位。
自動模式按鈕發出穩定紅光。	主機電量不足。
自動模式按鈕發出閃爍紅光。	主機發生問題。

6.故障排除/6.1 故障排除

編號	故障情況	可能原因	解決方法
1	主機無法充電。	主機未開機。	將主機開機。
		主機與充電站的充電極片未充分接觸。	確保主機充電極片已連接至充電站充電極片。
		電源線沒有連接至充電站。	請確定電源線已穩固連接至充電站。
		電池處於深度放電狀態。	進行電池啟動。開機。手動將主機放到充電站上，充電 3 分鐘後移出，重複該動作 3 次之後，正常充電。
		充電站沒有連接至電源供應器。	請確定充電站已連接至電源供應器。
2	DEEBOT 無法返回充電站。	充電站未正確放置。	請參閱 3.3 節，以正確放置充電站。
3	主機工作時卡住並停止運作。	主機被地面上的物品 (例如散亂的電線、窗簾布或地毯鬚邊等) 纏繞或阻礙。	主機會自主嘗試各種方法脫困，若未能脫困，建議手動進行。
4	未清掃完畢，主機返回充電。	主機工作中能感知電量不足，自動返回充電。	此為正常情況，無需處理。
		工作時間視地板表面、房間複雜程度和選擇的清掃模式而有所不同。	此為正常情況，無需處理。

編號	故障情況	可能原因	解決方法
5	DEEBOT 未按預約時間自動清掃。	定時預約功能已取消。	使用 ECOVACS App，將 DEEBOT 設定於特定時間清掃。
		繼續清掃功能已啟動，但主機剛剛才完成清掃預約清掃區域。	此為正常情況，無需處理。
		主機關機。	將主機開機。
		主機電量不足。	讓 DEEBOT 保持在開機狀態並連接充電站進行充電，為下次工作準備妥當。
		吸口堵塞且/或主機被垃圾堵塞。	請先關機，清理塵盒後將主機底部朝上。根據本說明書章節 4 分別清理主機吸口、主滾刷和邊刷。
6	主機並未清掃所有區域。	清理區域未經過整理。	在主機開始清潔前，清理地面上的細小物品，並整理清理區域。
7	DEEBOT 拖地時水盒無法出水。	水盒底部的注水孔濾材堵塞。	將水盒底部的注水孔轉開並清潔濾材。
		水盒沒有水。	將水加入水盒。
		DEEBOT 底部的出水口堵塞。	檢查底部的出水口並進行清理。
8	主機無法連線至家庭 Wi-Fi。	家庭 Wi-Fi 使用者名稱或密碼不正確。	輸入正確的 Wi-Fi 使用者名稱和密碼。
		主機不在家庭 Wi-Fi 訊號範圍內。	確保主機在家庭 Wi-Fi 訊號覆蓋範圍內。
		主機尚未準備好待配置時，網路設置已啟動。	打開主機電源開關，按住重置按鈕 3 秒。主機發出提示音，Wi-Fi 指示燈慢閃，即可進行網路設置。

6.故障排除/6.2 Wi-Fi 連線

在 Wi-Fi 設定之前，請確認 DEEBOT、手機以及 Wi-Fi 網路符合下列需求。

DEEBOT 及手機需求

- DEEBOT 已充飽電，且 DEEBOT 電源開關已經打開。
- Wi-Fi 狀態燈緩慢閃爍。
- 關閉手機的行動數據 (您可以在設定後重新開啟它)。

Wi-Fi 網路需求

- 請您使用 2.4GHz 或 2.4/5 GHz 混合式網路。
- 您的路由器支援 802.11b/g/n 及 IPv4 通訊協定。
- 請勿使用 VPN (虛擬私人網路) 或 Proxy 伺服器。
- 請勿使用隱藏的網路。
- WPA 及 WPA2 使用 TKIP、PSK、AES/CCMP 加密。
- 不支援 WEP EAP (企業驗證通訊協定)。
- 使用 Wi-Fi 通道1-11 (北美) 以及通道1-13 (北美以外) (請參照當地監管機關)。
- 如果您使用網路延伸器/中繼器，則網路名稱 (SSID) 及密碼與您的主要網路相同。

7.技術規格

主機型號	DLN12		
額定輸入	20V === 1A		
充電站型號	CH1822		
額定輸入	100-240V ~ 50-60Hz 0.5A	額定輸出	20V === 1A
頻率波段	2412MHz-2462MHz		

請注意：因產品持續改善的需要，本公司保留對產品進行任何技術、設計規格變更的權利，解釋權歸本公司所有。
Wi-Fi 模組的輸出功率小於 100mW。

Ecovacs Robotics Co., Ltd.

No. 18 You Xiang Road, Wuzhong District, Suzhou City,
Jiangsu Province, P.R.China

451-2009-2202